


Max Driver Operation Manual

"Max 7" for F-51854Series (160x128 HR and All Others)

Jan.11, 05 , Team STEP/OJ Rev.01

Operation Steps

1	Insert the module I/F Flex Cable to the Max 7's I/F connector and latch down the plastic fastener.
2	The LED backlight connection is connected through I/F cable, so that no need to connect the LED cables separately.
3	Plug in the AC Adapter to the module then automatically display will turn ON.
4	To adjust the CR level, press CR UP or DWN button,
5	To adjust the brightness of the LED backlight, press BRT UP or DWN button,
6	To change the display pattern, press CNG button and when you want to auto-change of the display pattern, press and hold min. 3 seconds and release. When you want to back to the fix pattern, press and hold min. 3 seconds again.
7	To reverse the image, press REV button.
8	Turn off ----- Just unplug the AC Adapter..
9	AC Adapter ----- DC 9 - 12 Volt.
10	<p><u>Important note when using the backlight power supply :</u></p> <p>Jumper setting :</p> <p>B/L "H" position ---- 290mA constant current output (Adjustable by LED brightness UP and DWN button).</p> <p>B/L "L" position ----80mA constant current output (Adjustable by LED brightness UP and DWN button).</p> <p>The output power supply for backlight is just for temporary use and current is not appropriate for each models, so that please use this power supply for quick visual test purpose only and please use appropriate power supply and condition based on each separate module specification when you evaluate the module for your formal design.</p>

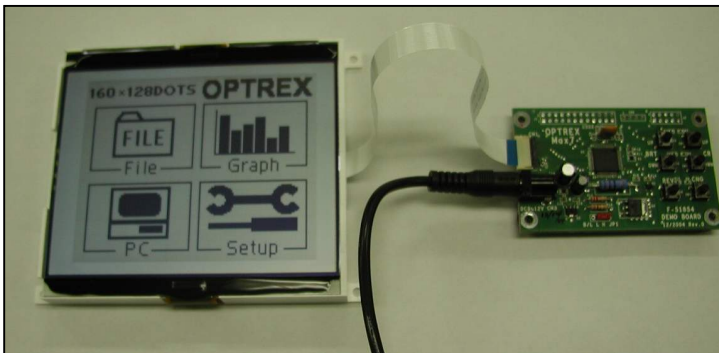

Example of Connection

